




### Polywoven Silt Fence Installation Guide

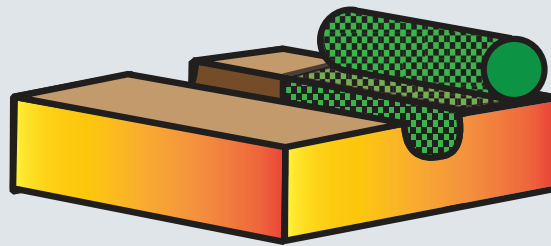

- 1) Trench (minimum 150mm)
- 2) Install Silt Fence and back fill trench

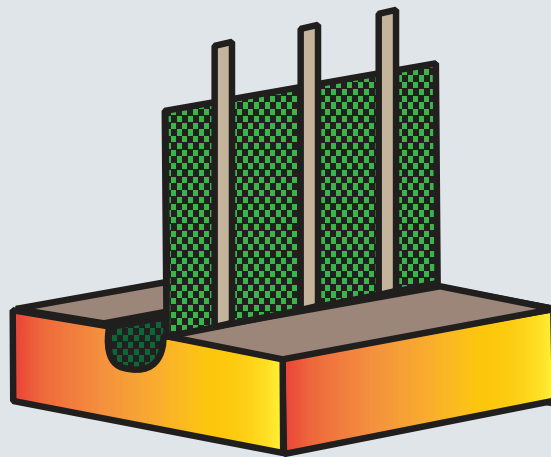

- 3) Install hardwood stakes on opposite side to flow

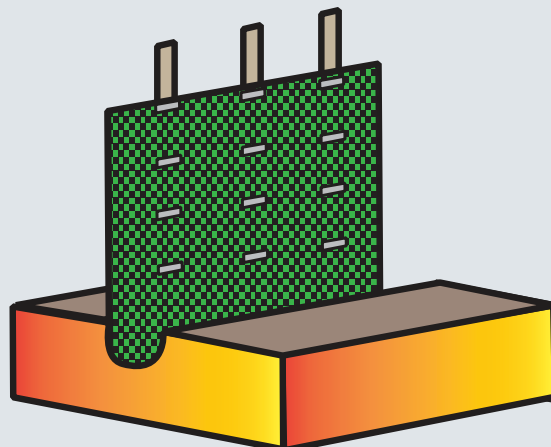

- 4) Secure Silt Fence to stakes using a staple gun